

To use your system most efficiently it is advised to program your heating and hot water schedule and choose temperature set points for each room as you see fit. It is advised that these set points be between 18°C and 21°C.

To find the operating manual for your heating controls first locate the Help button from the Home Screen, see Fig 1.

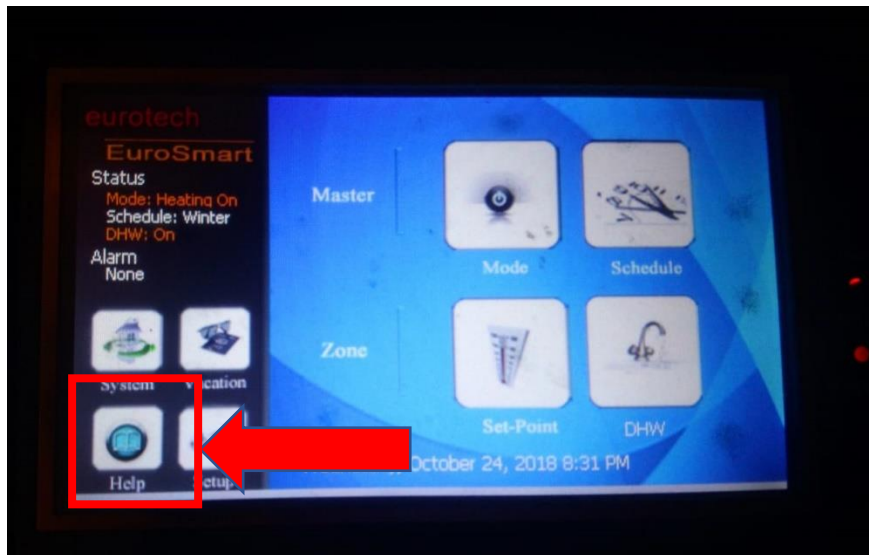


Figure 1 - Home Screen

This should bring you to the screen shown if Fig 2. On the top row is the link to the User Manual. This should provide you with instructions to configure your heating and water system efficiently.

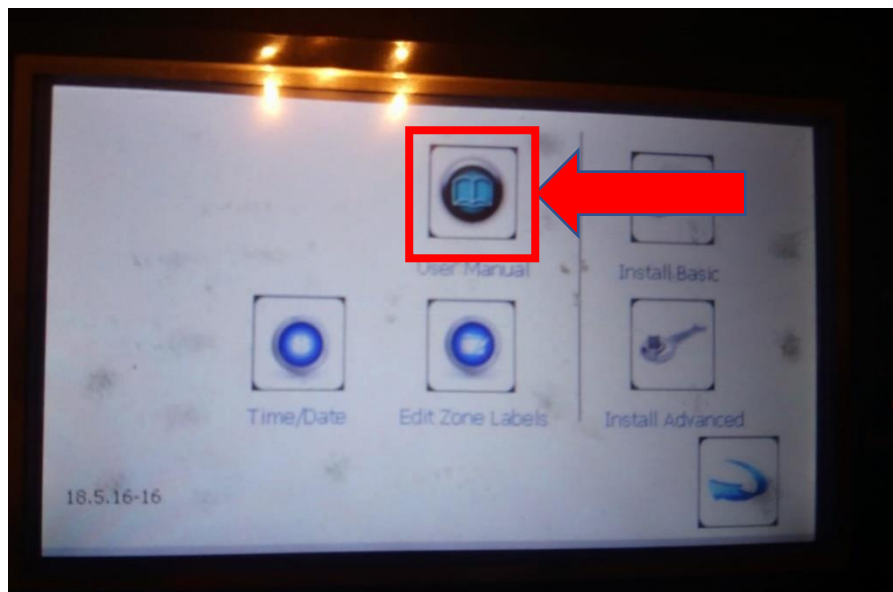


Figure 2 - Help Screen for User Manual